




NGC-40-HTC NGC-40-HTC3

Control and monitoring modules for use with the RAYCHEM NGC-40 system Installation Instructions

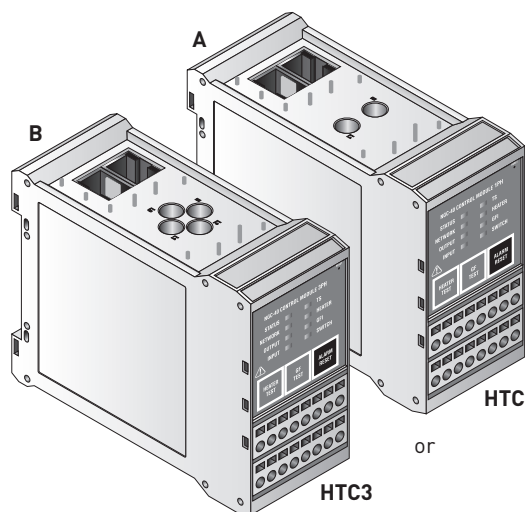

DESCRIPTION

The nVent RAYCHEM NGC-40-HTC (for single-phase heaters) and NGC-40-HTC3 (for three-phase heaters) modules are used to control either a solid-state relay or contactor within the NGC-40 control and monitoring system. This module also has one alarm output and one digital input. The alarm output can be used to control an external annunciator. The digital input is programmable and may be used for various functions such as forcing outputs on and off. Other features of this module include ground-fault and line current sensing for both HTC and HTC3. The front panel of the HTC module has LED indicators for various status conditions. The front panel also provides a ground-fault and heater test button.

TOOLS REQUIRED

- Small flat-blade screwdriver

ADDITIONAL MATERIALS REQUIRED

- Power supply 24 Vdc @100 mA per NGC-40-HTC/HTC3
- Custom built CAN cables with RJ-45 connections
- CAN Termination Resistor

KIT CONTENTS

Item	Qty	Description
A	1	NGC-40-HTC module (single-phase heaters)
or		
B	1	NGC-40-HTC3 module (three-phase heaters)

APPROVALS

Hazardous Locations



Class I, Div. 2, Groups A,B,C,D T4
Class I, Zone 2, AEx nC IIC T4 IP20
Ex nL nC IIC T4 X
-40°C ≤ Ta ≤ +65°C

Certified to:

CAN/CSA STD. C22.2 No. 213-M1987 (R2004)
CAN/CSA STD. C22.2 No. 61010-1:2004
EN 61010-1 (2001)
CAN/CSA STD. E60079-15:02 (R2006)

Conforms to:

FM Class Number 3600 (11/98)
FM Class Number 3611 (10/99)
ANSI/UL STD. 60079-15-2009
UL STD. 61010-1



WARNING:

This component is an electrical device that must be installed correctly to ensure proper operation and to prevent shock or fire.
For technical support, call nVent at (800) 545-6258.

GENERAL

Supply voltage	24 Vdc \pm 10%
Internal power consumption	< 2.4 W per NGC-40-HTC/HTC3 module
Ambient operating temperature	-40°C to 65°C (-40°F to 149°F)
Ambient storage temperature	-40°C to 75°C (-40°F to 167°F)
Environment	PD2, CAT III
Max. altitude	2,000 m (6,562 ft)
Humidity	5 – 90% noncondensing
Mounting	Din Rail – 35 mm

ELECTROMAGNETIC COMPATIBILITY

Emissions	EN 61000-6-3 Emission standard for residential, commercial and light industrial environments
Immunity	EN 61000-6-2 Immunity standard for industrial environments

TEMPERATURE SENSORS

Type	100 Ω platinum RTD, 3-wire, α = 0.00385 ohms/ohm/°C Can be extended with a 3-conductor shielded cable of 20 Ω maximum per conductor 100 Ω , Ni-Fe, 2-wire Can be extended with a 2-wire shielded cable of 20 Ω maximum per conductor
Quantity	One per NGC-40-HTC/HTC3 module

CURRENT SENSORS (internal to the module)

Quantity per NGC-40-HTC/HTC3	1 for ground-fault measurements
Quantity per NGC-40-HTC	1 for single-phase line current measurements
Quantity per NGC-40-HTC3	3 for three-phase line current measurements
Maximum Line - Line Voltage:	1000 Vac

ALARM RELAY

Dry contact relay (voltage free)	Relay contact rated 250 V / 3 A 50/60 Hz (CE) and 277 V / 3 A 50/60 Hz (c-CSA-us). Alarm relay is programmable. NO and NC contacts available.
----------------------------------	---

CONTACTOR OUTPUT RELAY

	Relay contact rated 250 V / 3 A 50/60 Hz (CE) and 277 V / 3 A 50/60 Hz (c-CSA-us).
--	--

DIGITAL INPUT

Multi-purpose input	Multi-purpose input for connection to external dry (voltage-free) contact or DC voltage. May be user programmable for: not used / force off / force on functions. It can be configured to be active open or active closed.
---------------------	--

CAN NETWORKING PORT

Type	2-wire isolated CAN-based peer to peer network. Isolated to 24 Vdc – verified by 500 Vrms dielectric withstand test
Connection	Two 8-pin RJ-45 connectors (both may be used for Input or Output connections)
Protocol	Proprietary NGC-40
Topology	Daisy chain
Cable length	10 m (33 ft) maximum
Quantity	Up to 80 HTC/HTC3 and IO modules per network segment
Address	Unique, factory assigned

CONNECTION TERMINALS

Wiring terminals	Cage clamp, 0.5 to 2.5 mm ² (24 to 12 AWG)
------------------	---

HOUSING

Size	45.1 mm (1.78 in) wide x 87 mm (3.43 in) high x 106.4 mm (4.2 in) deep
------	--

LINE CURRENT SENSORS

Max current	60 A
Accuracy	\pm 2% of reading


GROUND-FAULT SENSOR

Range	10 – 250 mA
Accuracy	\pm 2% of range

OUTPUTS

SSR output	12 Vdc @ 45 mA max per output
------------	-------------------------------

SYSTEM COMPONENTS

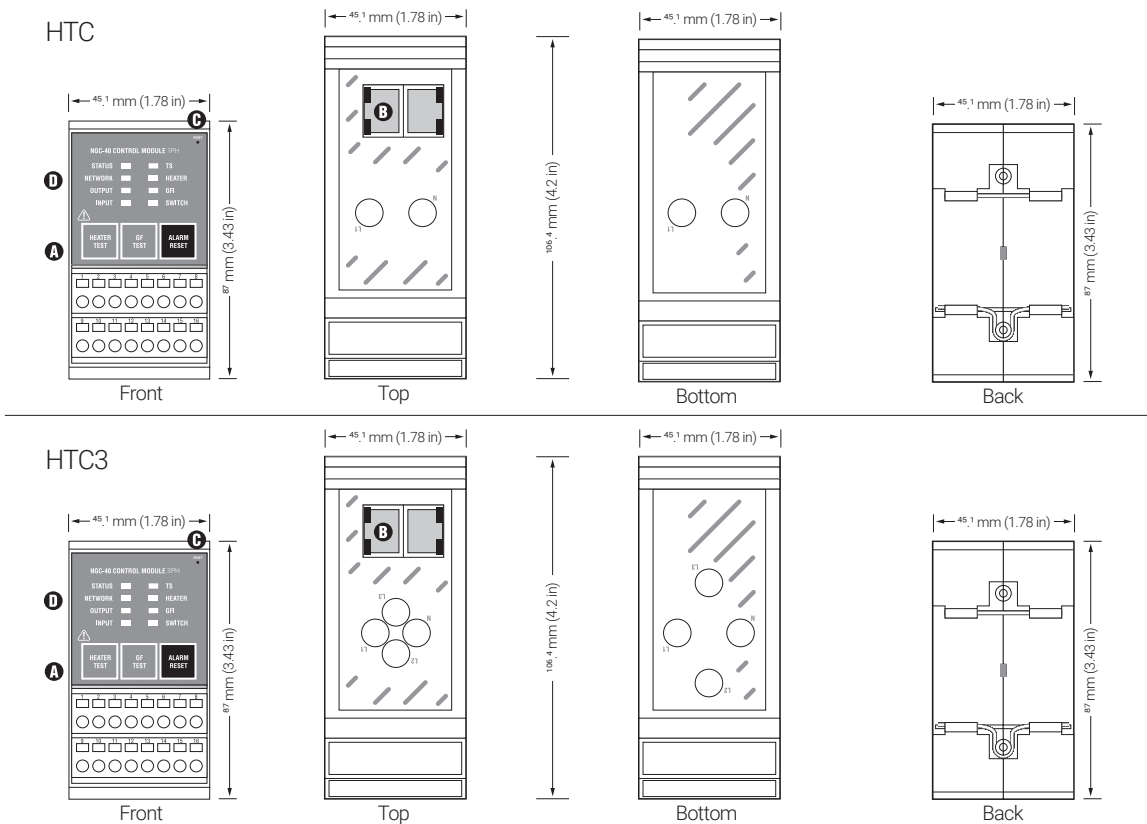

SYSTEM COMPONENTS (CONTINUED)

A. WIRING TERMINALS

Terminals	Function
1	Alarm relay N.O.
2	Alarm relay COM
3	Alarm relay N.C.
4	Not used
5	SSR Out +
6	SSR Out -
7	Digital In +
8	Digital In -
9	Line In
10	Line Out
11	Coil Out
12	
13	TS COM (Wht)
14	TS Sense (Red)
15	TS Source (Red)
16	Not used

WARNING: Shock Hazard.
Disconnect from live voltage prior to accessing terminals

B. CAN BUS/MODULE POWER

C. RESET

D. STATUS LEDS

Status:	Indicates status of HTC/HTC3 module
Off	No power
Green	Normal operation, no internal faults
Yellow	In Factory mode
Red	HTC/HTC3 operating status
Flash R	Internal Fault:
Flash R/G	Factory status
Flash R/Y	Internal fault detected
Network:	Indicates CAN network activity
Off	No network activity
Green	Flicker on receipt of network data
Yellow	Flicker on transmission of network data
Flash R	Network communication failure
Input:	Shows status of digital input
Off	Input is inactive (open)
Green	Input is active (shorted)
Flash R	Ext. input source failure


Output:	Shows status of contactor or SSR
Off	Output off
Green	Follows output state
Heater:	Indicates the heater's alarm status
Off	No alarm
Red	High or low current or resistance alarm
Flash R	Overcurrent trip alarm
TS:	Indicates the temperature alarm status
Off	No alarm
Red	High or low temperature alarm
Flash R	Temperature sensor failure
GFI:	Indicates ground-fault status
Off	No alarm
Red	High or low ground-fault alarm
Flash R	Ground-fault trip alarm
Switch:	Indicates contactor/SSR switch status
Off	No alarm
Red	Contactor cycle count alarm
Flash R	Switch failed shorted on

MOUNTING THE NGC-40-HTC/HTC3

Each NGC-40-HTC/HTC3 mounts on a DIN 35 rail.

MOUNTING: Insert the rear bottom of the module into the DIN rail, then push up and inwards to engage the clip.

REMOVAL: Push the module upwards to disengage the clip, then rotate the module toward you.

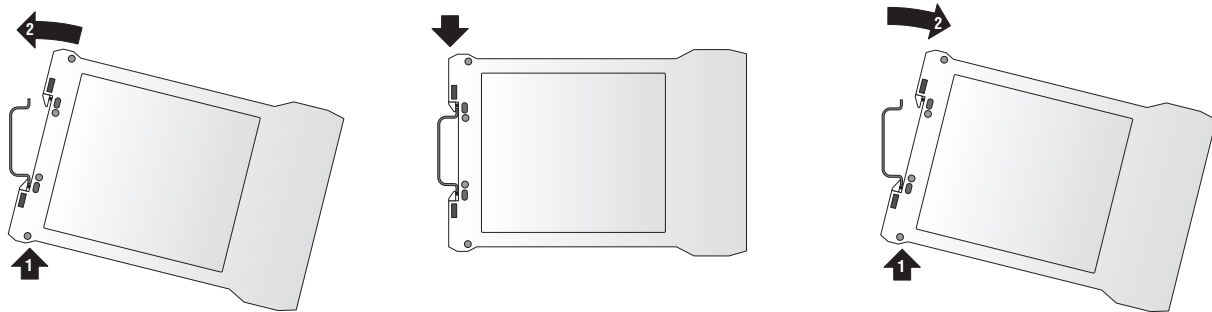


POWER SUPPLY/CAN

The power supply/CAN connector is an RJ-45 connector.

The CAN termination device must be installed in the unused port of the last module.


Connections are the same for the HTC3.

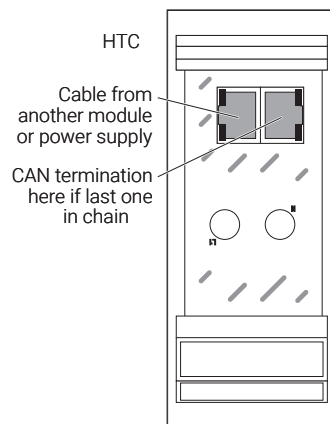

RTD INPUT CONNECTIONS – NORTH AMERICAN INSTALLATION TECHNIQUE

For all RTD terminations, the RTD field wires must be terminated on a panel-mounted terminal block.


Connections are the same for the HTC3.

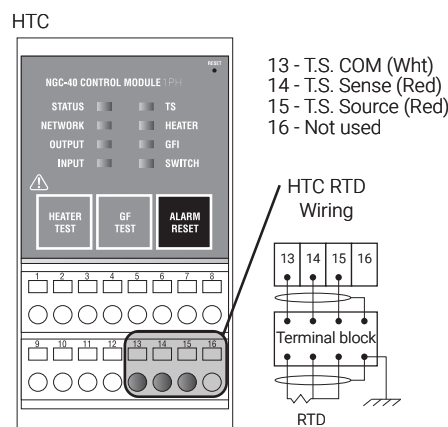

RTD INPUT CONNECTIONS – EUROPEAN INSTALLATION TECHNIQUE

For all RTD terminations, the RTD field wires must be terminated on a panel-mounted terminal block. The RTD cable shield from the field terminal block to the HTC module should be terminated at the earth ground bar located near the module.

Connections are the same for the HTC3.

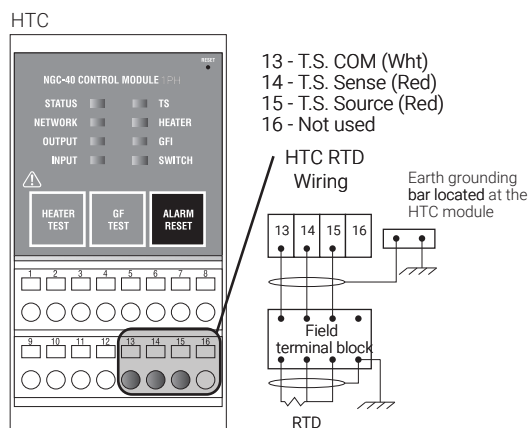


HTC RELAY OUTPUT CONNECTIONS TO CONTACTORS - SINGLE-PHASE

Terminals 9 and 11 switch voltage to the contactor coils. The internal pilot relay will switch the supply voltage (up to 277 V) to the contactor coil. Refer to the diagram at the end of this document called “NGC-40 CAN bus Connections for Up to 10 Modules” for detail wiring.


Note: Exposure to some chemicals may degrade the sealing properties of the relay output, manufactured by NAIS, PN JQ1P-12V. Periodically inspect the relay output for degradation of properties and replace if any degradation is found.

Connections are the same for the HTC3.

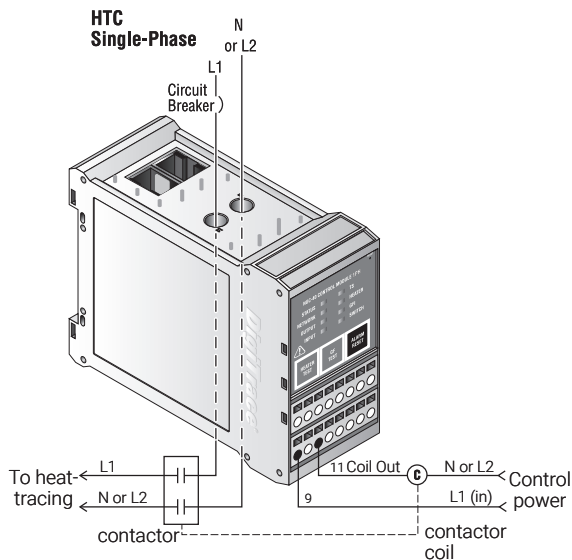

WARNING: Shock Hazard. Disconnect from live voltage prior to accessing terminals.


HTC3 RELAY OUTPUT TO CONTACTOR - THREE-PHASE

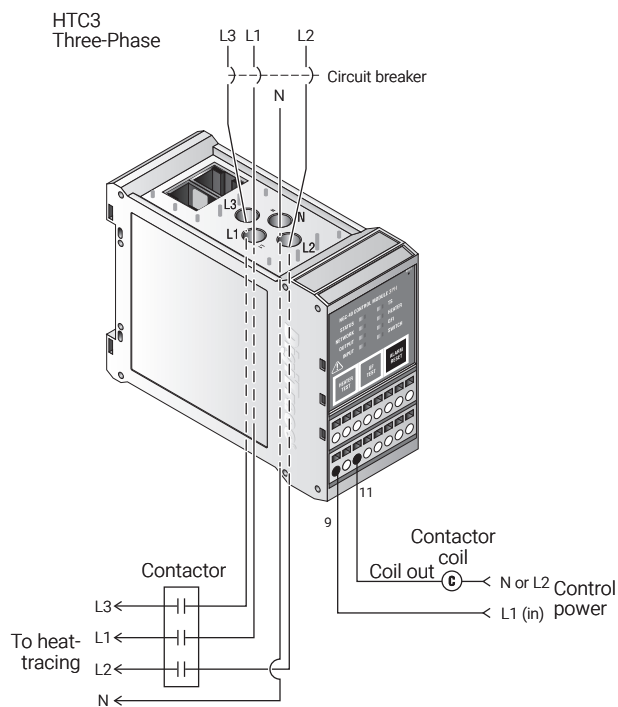


WARNING: Shock Hazard. Disconnect from live voltage prior to accessing terminals.

HTC OUTPUT CONNECTIONS TO SSR - SINGLE-PHASE

Terminals 5 & 6 switch voltage to the SSR. The internal SSR driver will switch the internal supply voltage (12 Vdc) to the SSR.

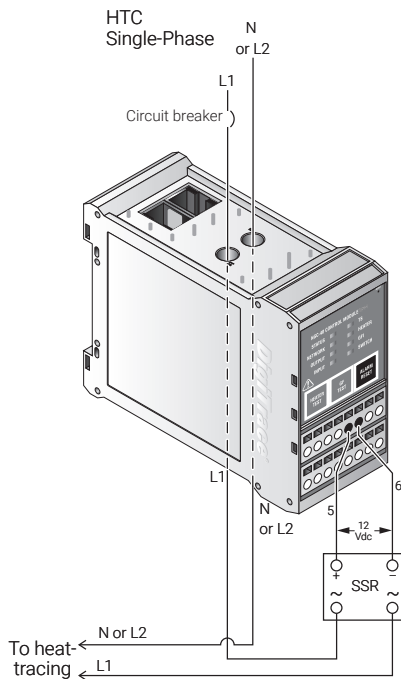

HTC3 OUTPUT CONNECTIONS TO SSR - THREE-PHASE

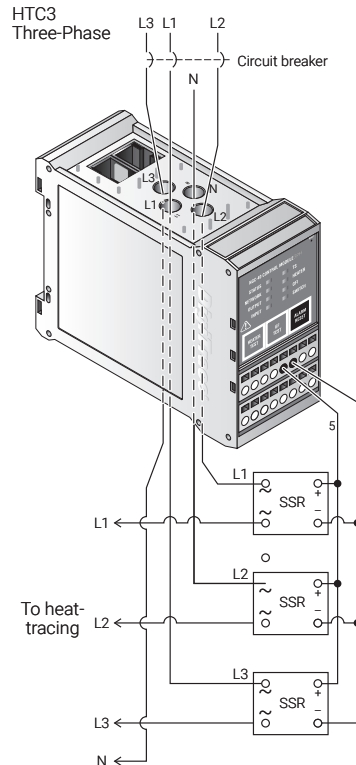

WARNING: Shock Hazard. Disconnect from live voltage prior to accessing terminals.

ALARM

WARNING: Shock Hazard. Disconnect from live voltage prior to accessing terminals.

Note: Exposure to some chemicals may degrade the sealing properties of the alarm relay, manufactured by NAIS, PN JQ1P-12V. Periodically inspect the alarm relay for degradation of properties and replace if any degradation is found.

Multi-purpose. Alarm relay energized in normal state.

The alarm relay is configured as Fail Safe.

The alarm relay connections provide a form C dry contact, rated at 277 V max (3 A).

The NO (normally open) contact is open in non-energized condition. When energized, it closes during normal conditions and will open upon an alarm condition or power failure.


The NC (normally closed) contact is closed in non-energized condition. When energized, it opens during normal conditions and will close upon an alarm condition or power failure.

Relay contact rated

250 V / 3A 50/60 Hz (CE)

277 V / 3A 50/60 Hz (c-CSA-us)

Connections are the same for the HTC3.

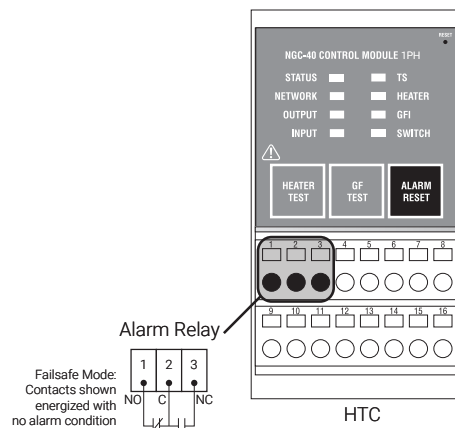


DIGITAL INPUT CONNECTIONS – NORTH AMERICAN AND EUROPEAN INSTALLATION TECHNIQUES

Digital Input Multi-purpose input for connection to external dry (voltage free) contact or DC voltage.


Rating 100 Ω max loop resistance or 5-24 Vdc @ 1mA maximum

Connections are the same for the HTC3.

North American Installations

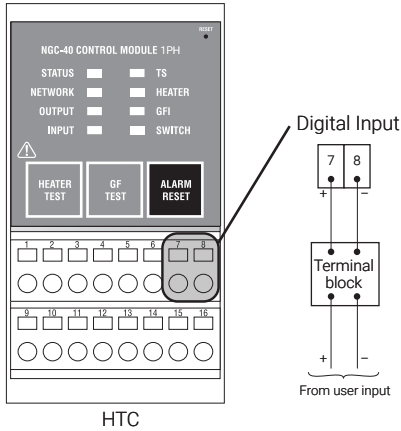

European Installations

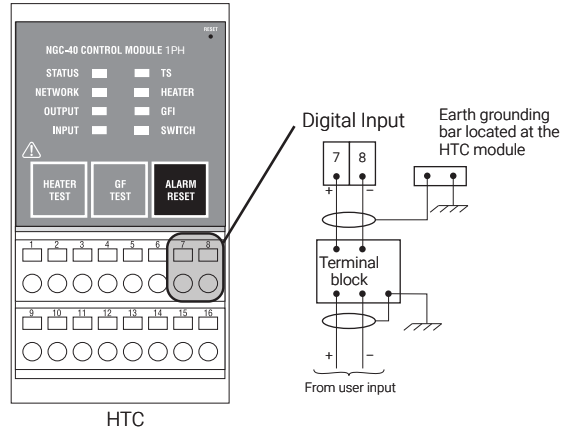

PROVIDE SUITABLE PANEL ENCLOSURE AND DETERMINE LOCATIONS FOR NGC-40-HTC OR NGC-40-HTC3 ASSEMBLY IN PANEL*


1. Provide suitable panel enclosure

The NGC-40-HTC or NGC-40-HTC3 must be mounted in an enclosure to protect its electronic components. For indoor applications, use a minimum NEMA 1 enclosure (NEMA 12 recommended). For outdoor applications, use a NEMA 4 or NEMA 4X enclosure depending on the requirements.

Note: The RAYCHEM NGC-40-HTC or NGC-40-HTC3 is designed for operation in ambient temperatures from -40°C to 65°C (-40°F to 149°F). If the ambient temperature is outside this range, a space heater and/or cooling fan will be required in the panel.


2. Determine locations for the NGC-40-HTC or NGC-40-HTC3 assembly in the electrical panel.

The NGC-40-HTC or NGC-40-HTC3 should be located in the rear of the panel. The NGC-40-HTC or NGC-40-HTC3 assembly is an electronic unit and must not be located where it will be exposed to strong magnetic fields or excessive vibration.

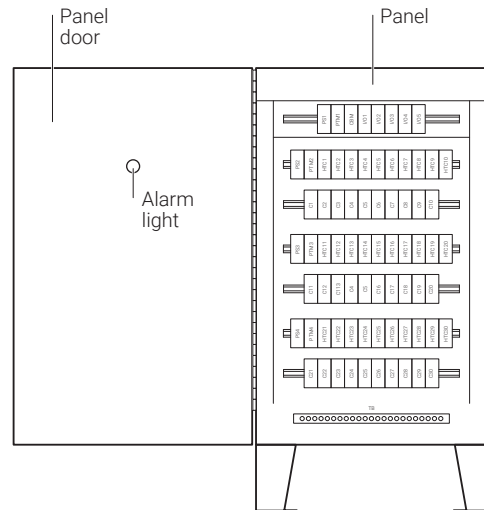


* North American panel installation techniques

NGC-40 CAN BUS CONNECTIONS FOR UP TO 10 MODULES

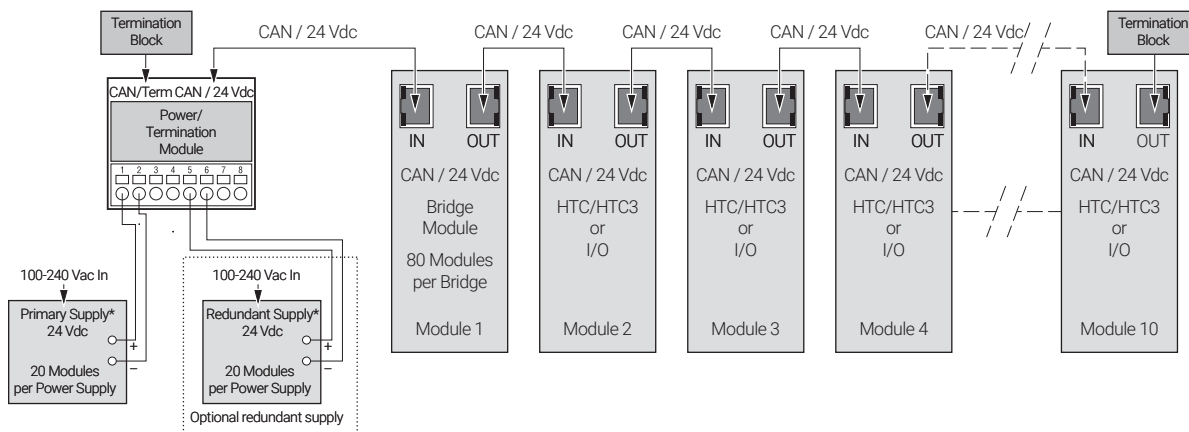


* Power supply shall have a means for disconnect from line voltage

NGC-40 CAN BUS CONNECTIONS FOR UP TO 20 MODULES

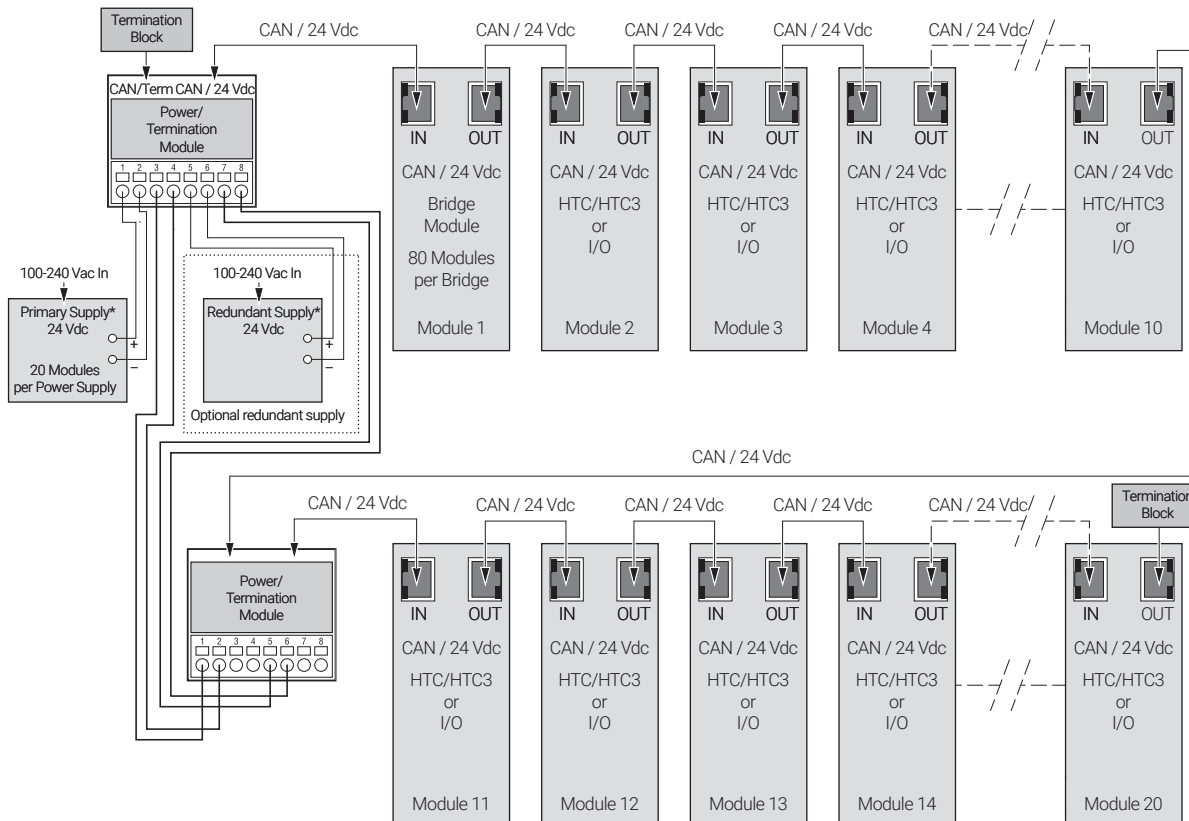

* Power supply shall have a means for disconnect from line voltage


NGC-40 CAN BUS CONNECTIONS FOR UP TO 40 MODULES

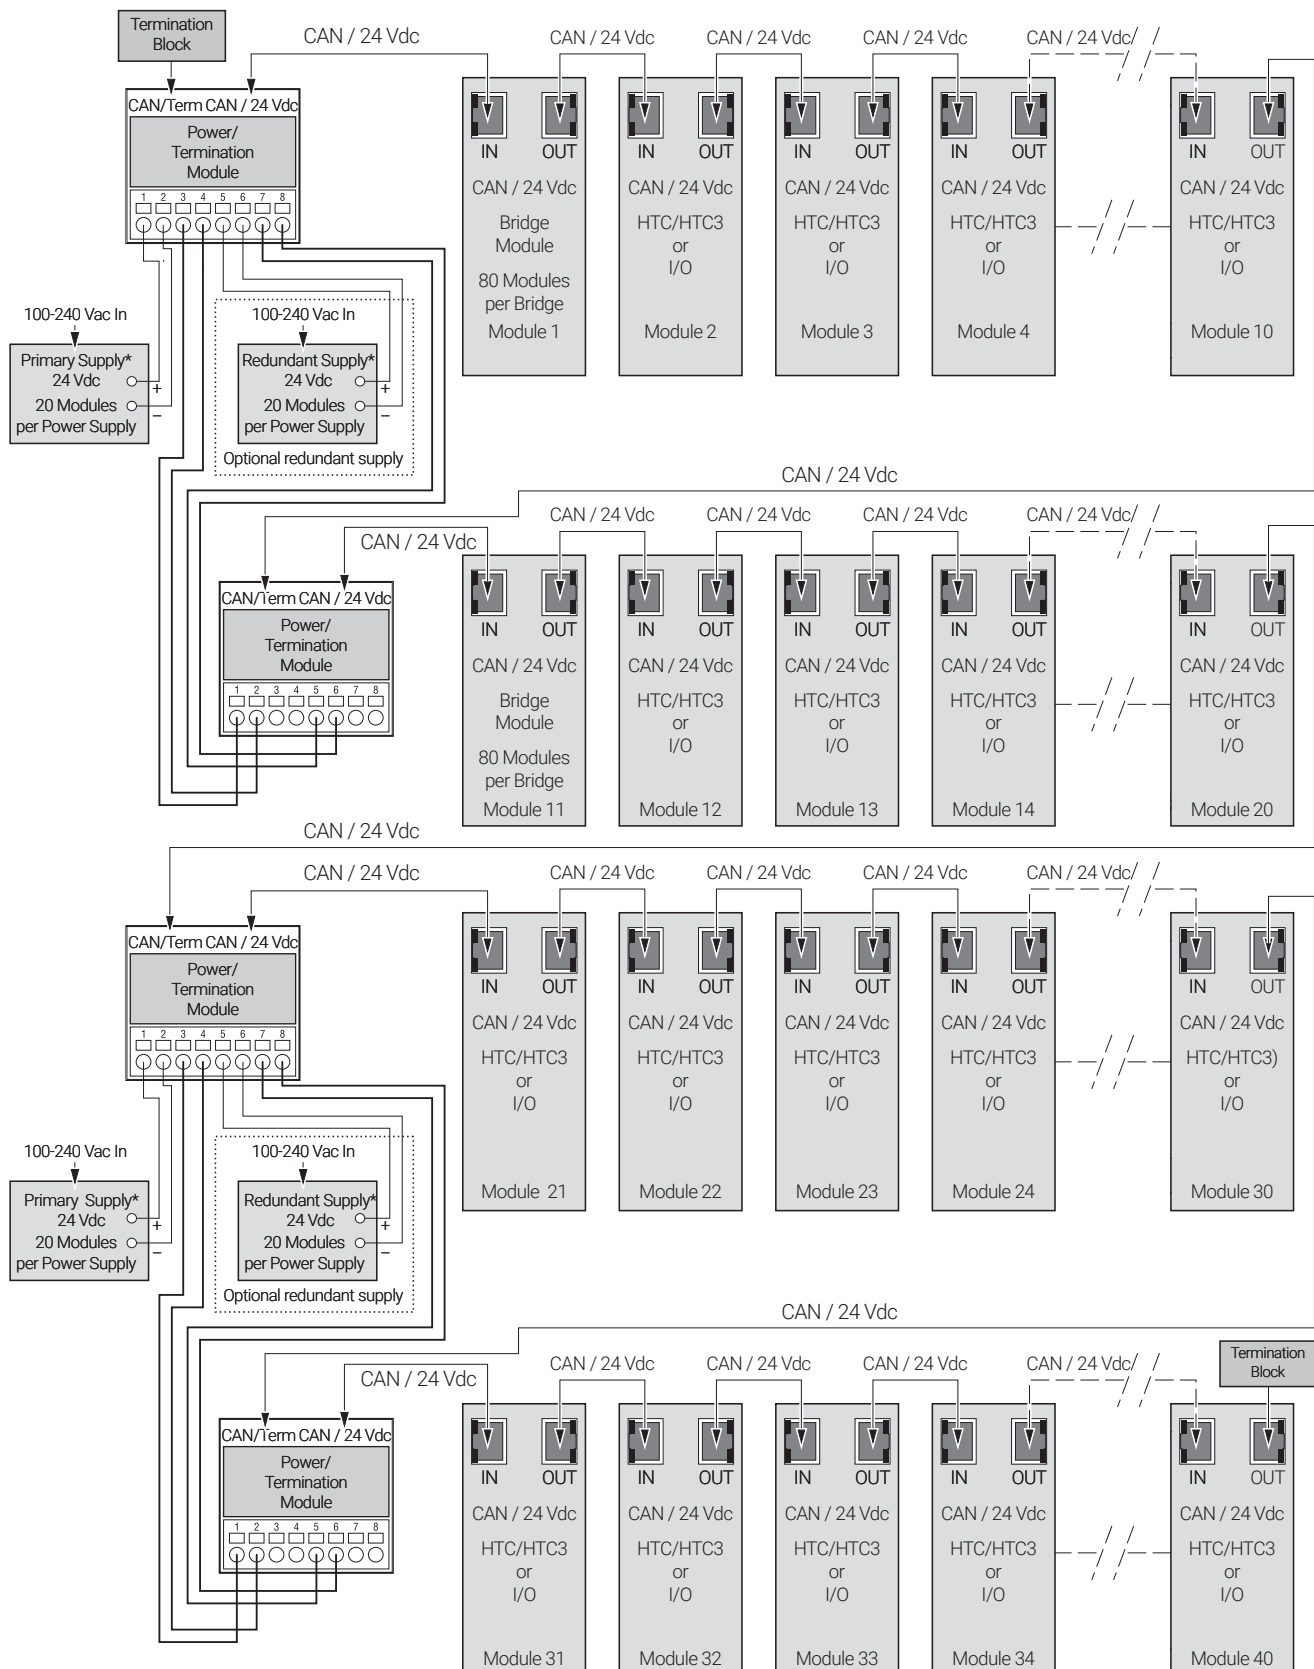



* Power supply shall have a means for disconnect from line voltage


SERVICING


The NGC-40-HTC/HTC3 contains no user serviceable parts. Contact your nVent Industrial Heat Tracing Solutions representative for service and an RMA number if required.

 **WARNING: Explosion Hazard - Substitution of components may impair suitability for Class I, Division 2 hazardous and nonhazardous locations**

 **AVERTISSEMENT - Risque D'explosion - La substitution de composants peut rendre ce matériel inacceptable pour les emplacements de Classe I, Division 2**

 **WARNING: Explosion Hazard - Do not replace NGC-40-PTM unless power has been switched off or the area is known to be nonhazardous**

 **AVERTISSEMENT - Risque D'explosion - Couper le courant ou s'assurer que l'emplacement est désigné non dangereux avant de remplacer le NGC-40-PTM**

 **WARNING: Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be nonhazardous**

 **AVERTISSEMENT - Risque D'explosion - Avant de déconnecter l'équipement, couper le courant ou s'assurer que l'emplacement est désigné non dangereux**

North America

Tel +1.800.545.6258
Fax +1.800.527.5703
thermal.info@nvent.com

Europe, Middle East, Africa

Tel +32.16.213.511
Fax +32.16.213.603
thermal.info@nvent.com

Asia Pacific

Tel +86.21.5426.2937
Fax +86.21.2412.1688
cn.thermal.info@nvent.com

Latin America

Tel +1.713.868.4800
Fax +1.713.868.2333
thermal.info@nvent.com



nVent.com